



<b>Product/Category</b>	<b>ASSEMBLY NUMBER</b>
<b>Spare parts for air heaters PLANAR 2D</b>	
Air intake hose with silencer, assy.2552	2552
Air pump for PLANAR 2D-12, assy.2613	2613
Air pump for PLANAR 2D-24, assy.2579	2579
Bushing for combustion chamber screen, assy.P2905	2905
Casing lower part, assy.P2647	P2647
Casing upper part, assy.P2648	P2648
Clamp for fuel pump with rubber gasket, assy.1467	1467
Combustion chamber screen, assy.P2967	P2967
Combustion chamber, assy.2578	2578
Connecting pipe nylon (PA 11-5,3x1,65 10m), assy.P1537	P1537
Control panel wire, assy.2067	2067
Control panel, assy.2051	2051
Control unit for PLANAR 2D-12, assy.2618	2618
Control unit for PLANAR 2D-24, assy.2581	2581
Digital control panel PU-22, assy.3355	3355
Exhaust silencer with mounting kit, assy.3064	3064
Fuel pump 12V, assy.1723	1723
Fuel pump 12V, assy.P327-12V	P327-12V
Fuel pump 24V, assy.2174	2174
Fuel pump 24V, assy.P327-24V	P327-24V
Fuel pump cable, assy.2061	2061
Fuel stand pipe, assy.807	807
Gasket repair kit for PLANAR 2D, assy.2704	2704
Glow plug bushing gasket, assy.P859	P859
Glow plug bushing, assy.P2659	P2659
Glow plug for PLANAR 2D-12, assy.2615	2615
Glow plug for PLANAR 2D-24, assy.2583	2583
Glow plug screen, assy.869	869
Grille for casing, assy.P2649	P2649
Heat exchanger, assy.P2654	P2654
Hook, assy.P1683	P1683
Mounting plates (2 plates 3mm and studs), assy.2759	2759
Power supply cable 12V, assy.1499	1499
Power supply cable 24V, assy.1693	1693
Silencer with mounting kit, assy.3535	3535
Temperature and overheat sensor for PLANAR 2D, assy.2582	2582

Temperature and overheat sensor, assy.3076	<b>3076</b>
Air intake hose with silencer, assy.1125	<b>1125</b>
Heat cover for exhaust pipe (24mm), assy.P3636	<b>P3636</b>
Exhaust pipe 1 meter, Ø 24mm, assy.DE019 (taking full 20m roll, price 7 euro/m)	<b>DE019</b>
Fuel stand pipe, assy.2063	<b>2063</b>
Fuel pump TH8-4,4ml-24V, assy.2838	<b>2838</b>
Bracket for control panel, assy.P2256	<b>P2256</b>